





INSTALLATION INSTRUCTIONS



Freelander 1


LRO-FREE-5-A

Parts List

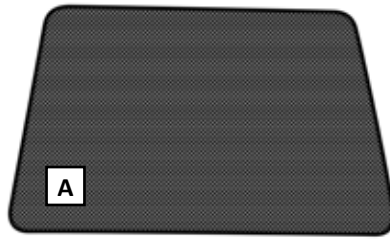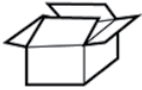

x2

A

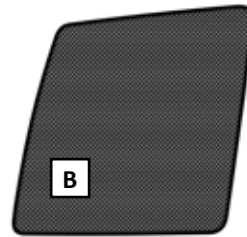

x2

B



x6



x4

INSTALLATION INSTRUCTIONS - LRO-FREE-5-A

