




156 SPORTWAGON - SUN BLIND INSTALLATION INSTRUCTIONS

PART NUMBER:







46002933

VEHICLE DESCRIPTION:

156 SPORTWAGON SUNBLINDS

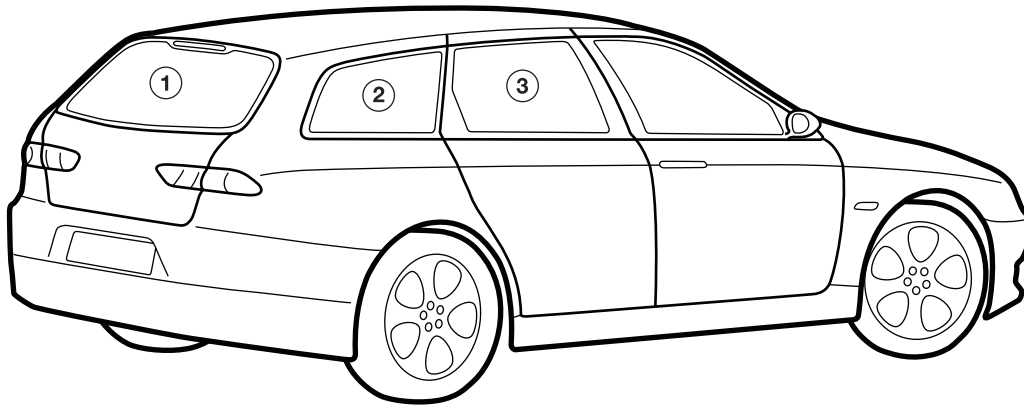

HARDWARE KIT

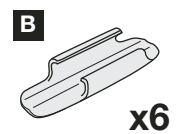
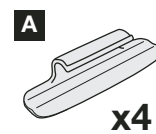
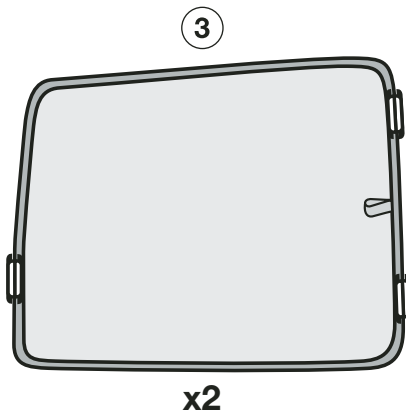
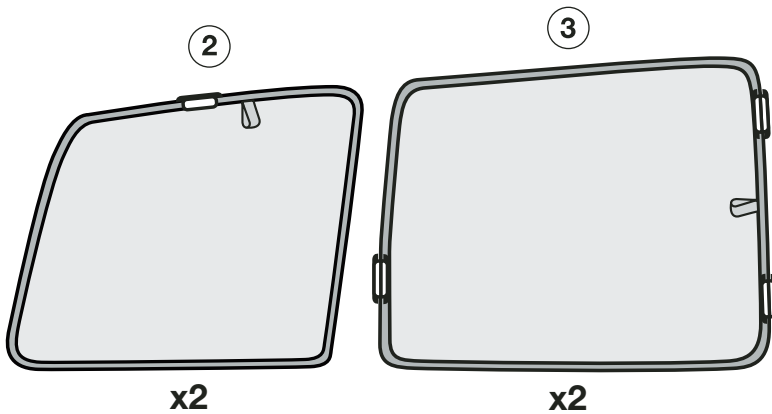
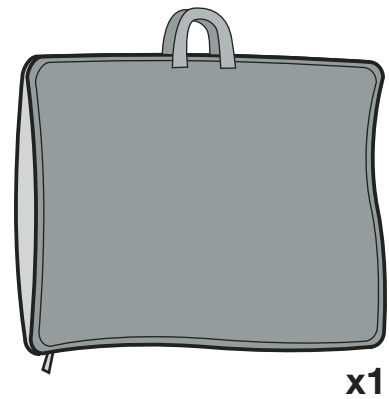
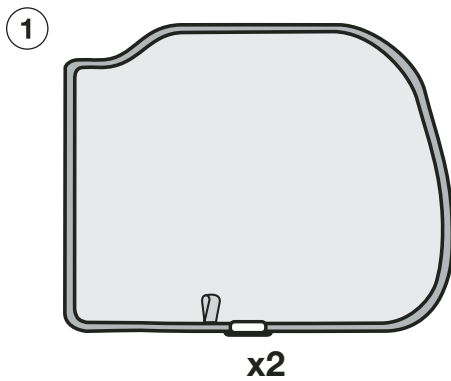


Warning

Read these fitting instructions carefully before you start the installation. Rear passenger windows must not be lowered more than 1/3 whilst the blinds are fitted and the vehicle is in motion. Blinds must not be used during the hours of darkness. On installation care must be taken not to scratch any paintwork with clips.



156 SPORTWAGON - SUN BLIND INSTALLATION INSTRUCTIONS

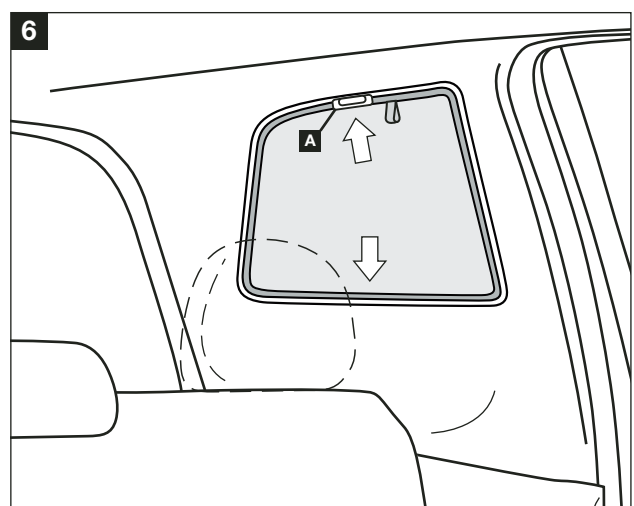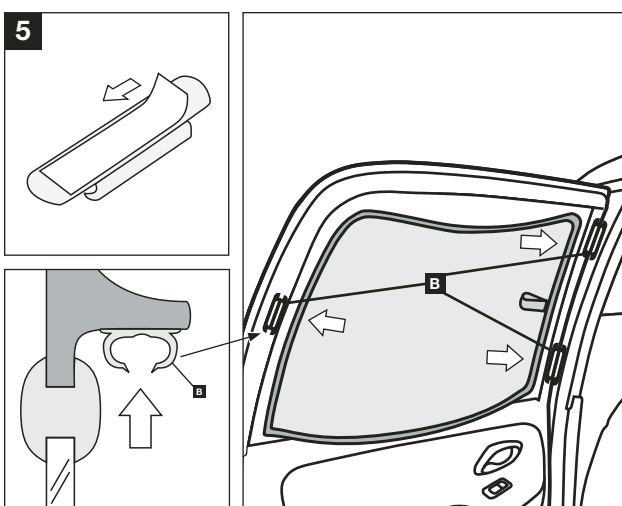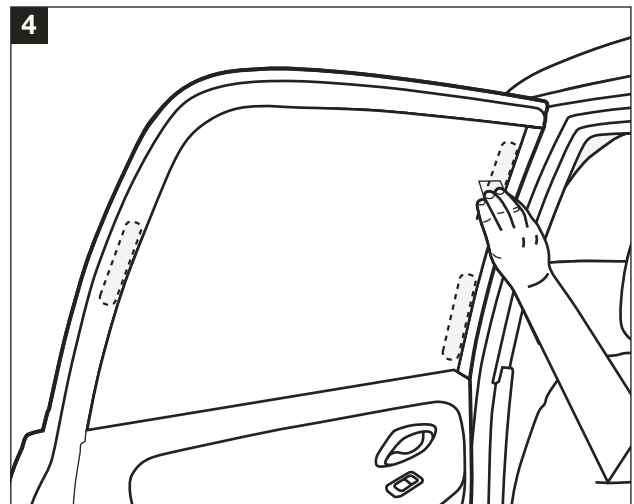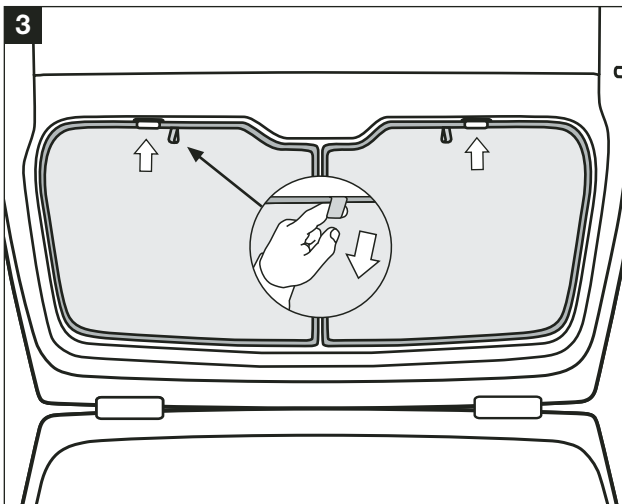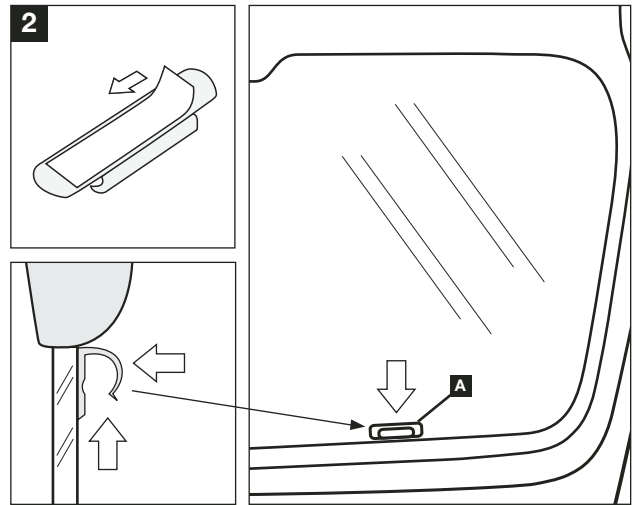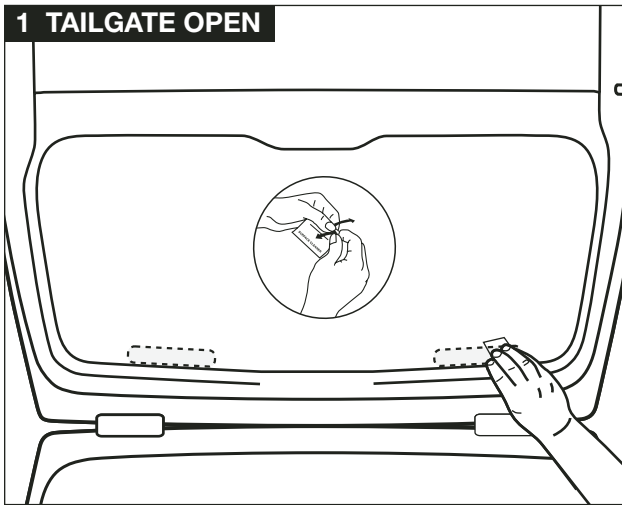

WARNING:

Read these fitting instructions carefully before you start the installation. Rear passenger windows must not be lowered more than 1/3 whilst the blinds are fitted and the vehicle is in motion. On installation care must be taken not to scratch any paintwork with clips.

