

NISSAN


**ALMERA 3dr - SUN BLIND
INSTALLATION INSTRUCTIONS**

PART NUMBER:

99998-59103


VEHICLE DESCRIPTION:

ALMERA 3dr SUNBLINDS

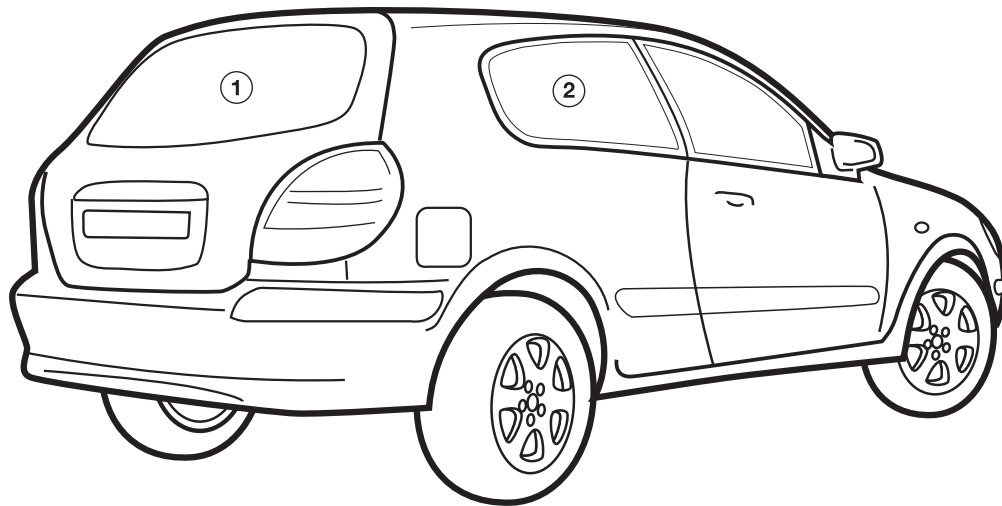


HARDWARE KIT

①

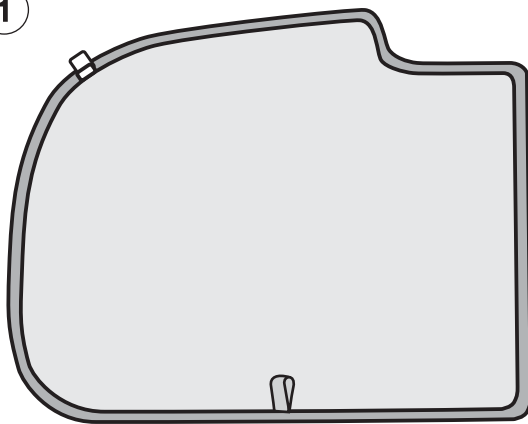

x2



②

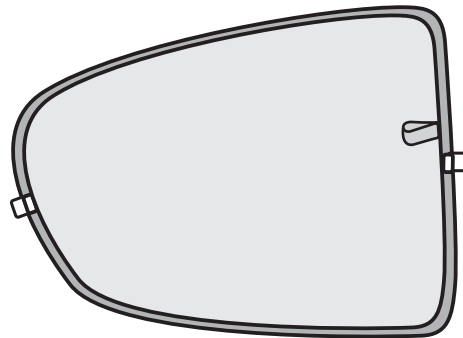

x2



x1

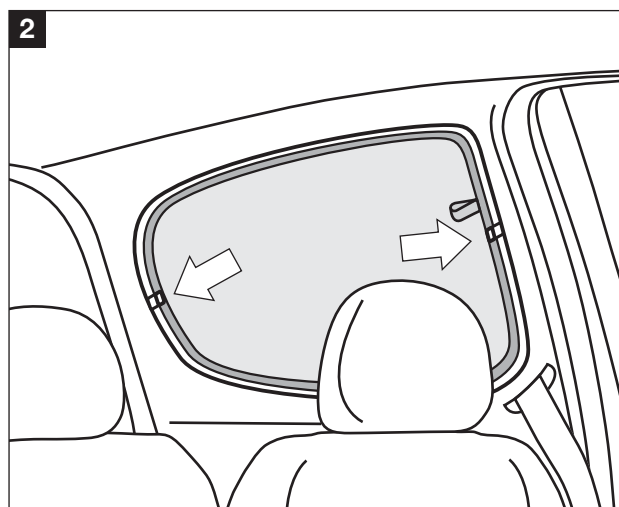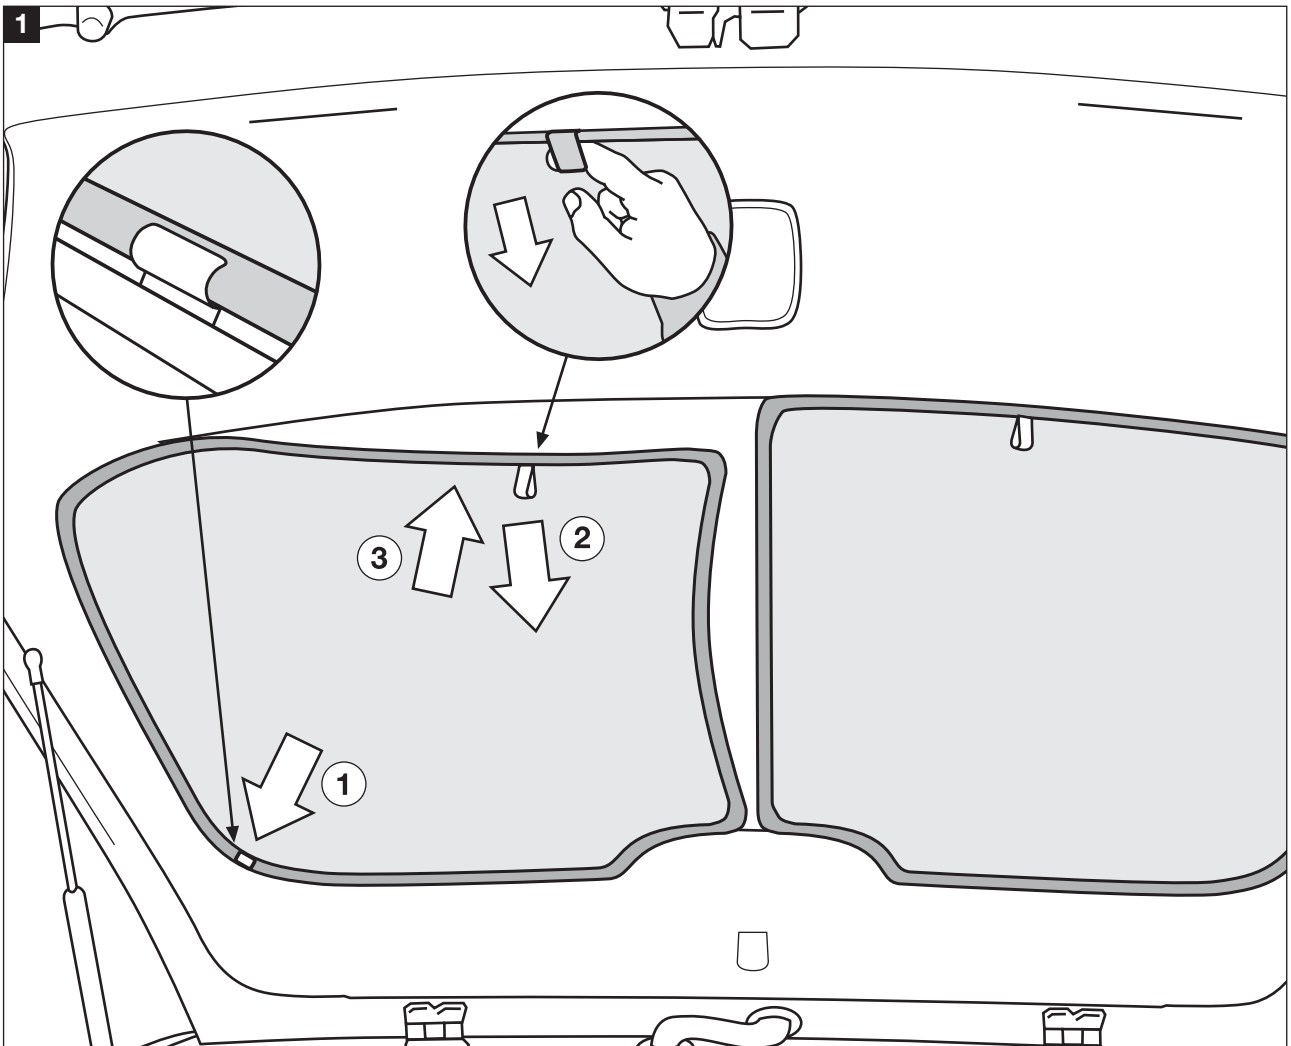

WARNING:

Read these fitting instructions carefully before you start the installation. Rear passenger windows must not be lowered more than 1/3 whilst the blinds are fitted and the vehicle is in motion. On installation care must be taken not to scratch any paintwork with clips.

