

Installation Manual

AUDI Q5 5DR
AU-Q5-5-B-18



COMPONENTS INCLUDED

CLIPS



CL-M02 x 4



CL-M12 x 2




CL-M13 x 2



Side Shade Installation


AUDI Q5 5DR
AU-Q5-5-B-18

COMPONENTS NEEDED:

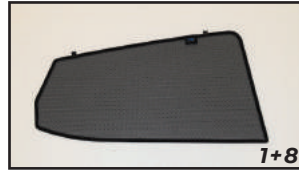


STEP #1

ATTACH CLIPS ON SHADE EDGES

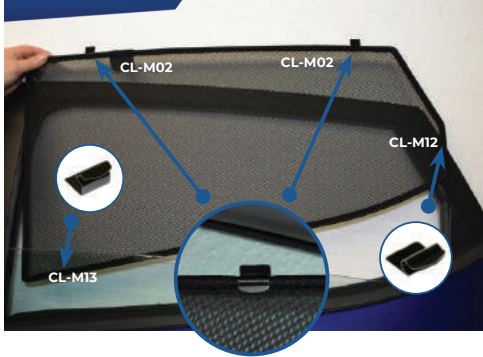


STEP #2

POSITION THE SIDE SHADE

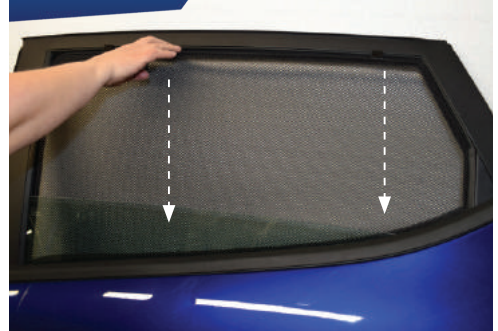

STEP #3

INSERT CLIPS INSIDE WEATHERSTRIP

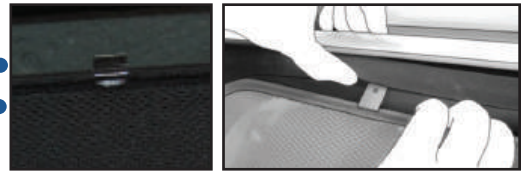

STEP #4

ENSURE SECURELY FITTED IN PLACE

