


# Installation Manual

BMW 2 SERIES ACTIVE TOURER 5DR  
BMW-2SAT-5-A



## COMPONENTS INCLUDED

## SHADES

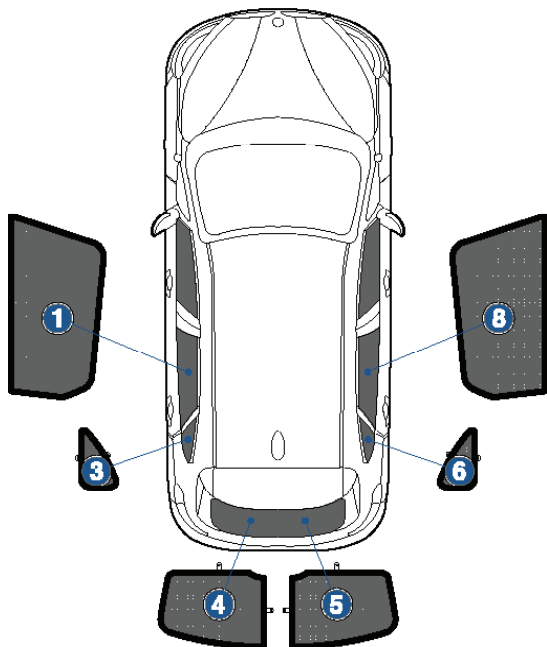

## FIXING CLIPS



CL-M02 x 4



CL-M12 x 2



CL-M09 x 4



CL-M14 x 1



CL-T01 x 1

# Side Shade Installation

BMW 2 SERIES ACTIVE TOURER 5DR  
BMW-2SAT-5-A

## COMPONENTS NEEDED:




### STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP



### STEP #2

POSITION THE SIDE SHADE

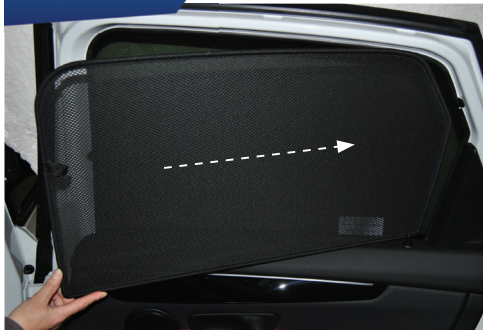

### STEP #3

ATTACH SIDE SHADE BEHIND CLIPS



### STEP #4

ENSURE SECURELY FITTED IN PLACE



**CAR**  
SHADES

# Quarter Light Shade Installation

BMW 2 SERIES ACTIVE TOURER 5DR  
BMW-2SAT-5-A

## COMPONENTS NEEDED:



### STEP #1

ATTACH CLIPS ON SHADE EDGES



### STEP #2

INSERT CLIPS BEHIND INTERIOR TRIM



### STEP #3

ENSURE SECURELY FITTED IN PLACE




**CAR**  
SHADES

# Rear Shade Installation

BMW 2 SERIES ACTIVE TOURER 5DR  
BMW-2SAT-5-A

## COMPONENTS NEEDED:

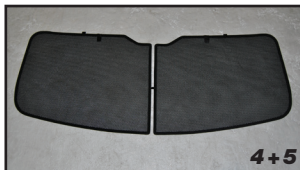


### STEP #1

ATTACH CLIPS ON SHADE EDGES



### STEP #2

POSITION THE REAR SHADE

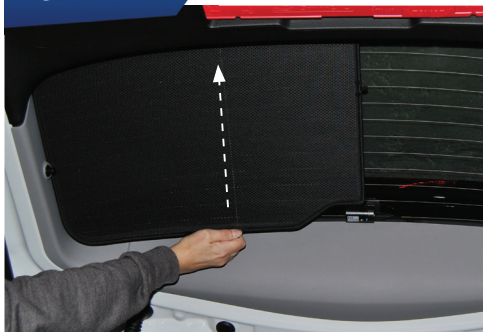


### STEP #3

INSERT CLIPS BEHIND INTERIOR TRIM



### STEP #4

REPEAT THE PROCESS ON OTHER SHADE

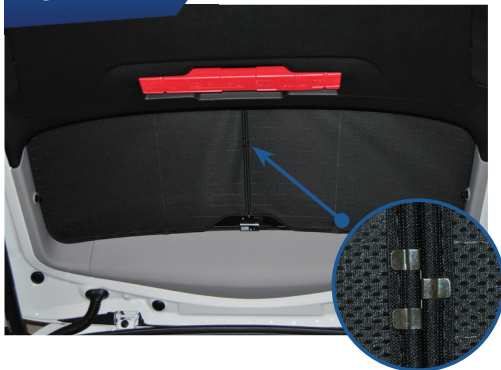

### STEP #5

ENSURE SECURELY FITTED IN PLACE

