

Installation Manual

FORD EDGE 5DR
FOR-EDGE-5-A-18



COMPONENTS INCLUDED

FIXING CLIPS



CL-M12 x 4



Side Shade Installation

FORD EDGE 5DR
FOR-EDGE-5-A-18

COMPONENTS NEEDED:



STEP #1

ATTACH CLIPS ON SHADE EDGES




STEP #2

POSITION THE SIDE SHADE



STEP #3

INSERT CLIPS INSIDE WEATHERSTRIP

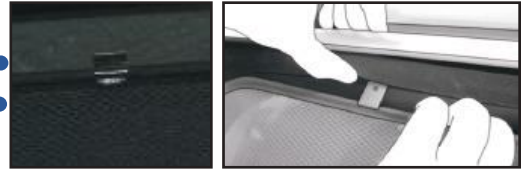

STEP #4

ENSURE SECURELY FITTED IN PLACE



CAR
SHADES