


Installation Manual

VAUXHALL ASTRA EST
VAU-ASTR-E-D-18



COMPONENTS INCLUDED

SHADES

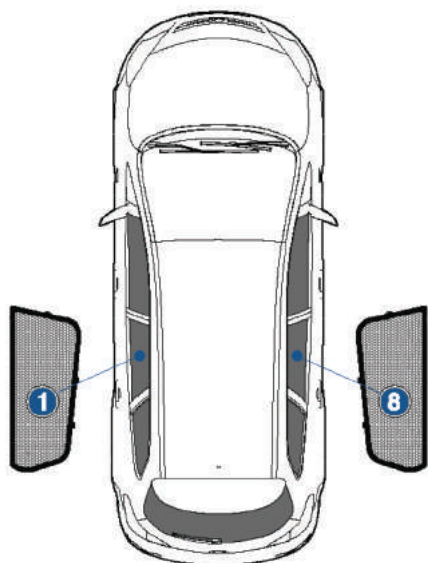

1+8

FIXING CLIPS



CL-M12 x 4



CL-M03 x 2

CAR
SHADES

Side Shade Installation

VAUXHALL ASTRA EST
VAU-ASTR-E-D-18

COMPONENTS NEEDED:



1+8



CL-M12 x 4



CL-M03 x 2


STEP #1

ATTACH CLIPS ON SHADE EDGES




STEP #2

POSITION THE SIDE SHADE

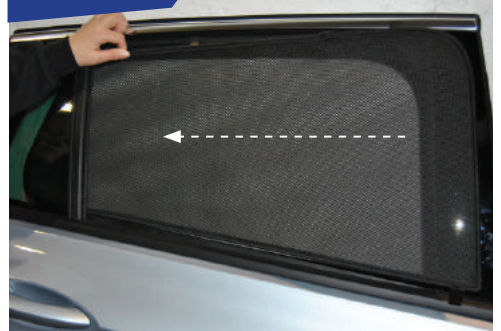


STEP #3

INSERT CLIPS INSIDE WEATHERSTRIP

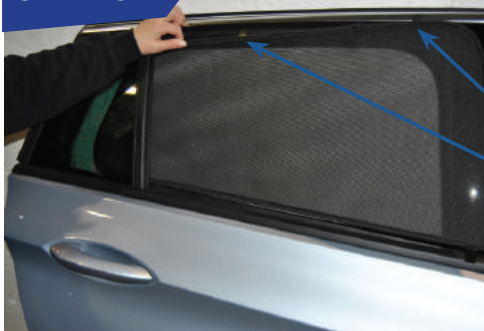

STEP #4

ENSURE SECURELY FITTED IN PLACE

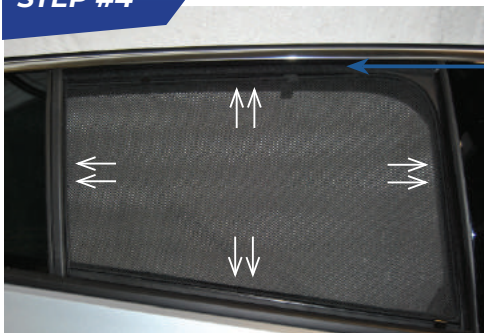

CAR
SHADES