


Installation Manual

VW T-CROSS 5DR
VW-TCRO-5-A-18



Shades

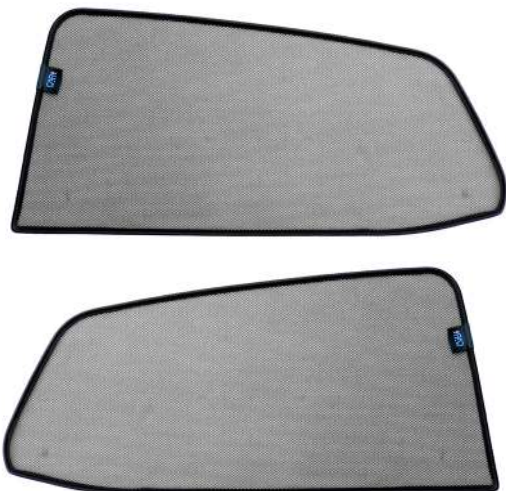

Side Shades

Fixing Clips



CL-M11 x 4



CL-M13 x 2



Installation

VW T-CROSS 5DR
VW-TCRO-5-A-18

Components Needed



Side Shades



CL-M13 x 2




CL-M11 x 4



CL-T01 x 1

Side Shade Installation

STEP 1

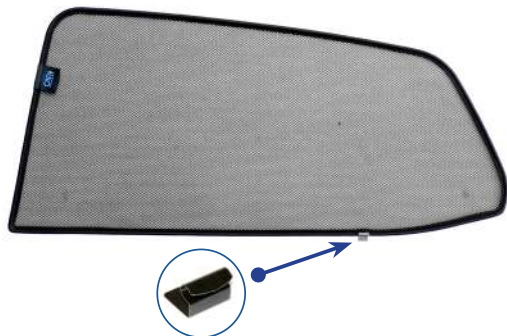

STEP 2



STEP 3



Peel back the rubber trim using the CL-T01 tool

STEP 4



STEP 5



STEP 6



Repeat steps 3 & 4 for the second M11 clip

Installation

VW T-CROSS 5DR
VW-TCRO-5-A-18



Side Shade Installation

STEP 7



STEP 8



STEP 9



STEP 10



STEP 11



STEP 12



Repeat this whole process for the other side.